

# Icom ID-800H VHF/UHF Radio

## Operating Guide

### Turning the Power On or Off

Press and hold **[PWR]** for 1 sec. to turn the power On or Off.



### Selecting the Output Power

The ID-800H has three output levels:

- High, 55 watts on VHF and 50 watts on UHF
- Mid, 15 watts VHF/UHF
- Low, 5 watts VHF/UHF

Press **[LOW•DUP]** one or more times to select the output power.

**Alternatively:** Press the HM-133 microphone button **4 [DTCS•HIGH]** for high power, or button **5 [DTCS•MID]** for medium power, or button **6 [DTMF•LOW]** for low power.

#### S/R/F INDICATOR

High: ██████████



Mid: █████

Low: █

### Activating Memory Mode

Press **[M/CALL•PRIO]** to activate Memory mode.

The **[M]** indicator icon appears on the LCD display when Memory mode is activated.

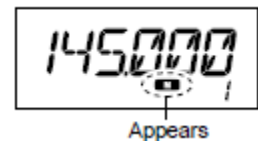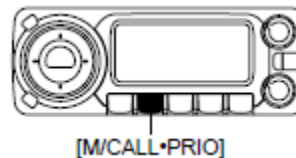

**Alternatively:** Press the HM-133 microphone button **[MR/CALL]** to activate Memory mode.

### Operating in Memory Mode

- If necessary, press **[M/CALL•PRIO]** to activate Memory mode.
- To change the Memory channel, rotate **[DIAL]**.
- To start a scan, press and hold **[V/MHz•SCAN]** for 1 second.
- To stop a scan, press **[V/MHz•SCAN]**.

**Alternatively:** Press the microphone button **[MR/CALL]** to activate Memory mode, then use the **▲/▼** buttons to change channels.

