

Quick Reference Card for Yaesu FT-7800R, courtesy W5JCK

Yaesu FT-7800R: Memory Storage	Yaesu FT-7800R: Miscellaneous Operations
Press V/M for VFO mode , tune the receive frequency.	TX Power: Press LOW to change level.
Press and hold SET for ½ second to enter Set mode .	Rev TX/RX: Press and hold HM/RV (if Menu 16 is set to REV).
Set tone mode via Menu 42 SQL.TYP . Set tone frequency via Menu 44 TN FRQ .	PRI channel: Store the frequency for the Priority Channel into Memory Channel 1.
Press and hold SET for ½ second to exit Set mode .	Dual Watch: Press and hold MHz for ½ second.
Press and hold V/M for ½ second, turn to desired memory channel, press V/M again to store frequency.	Lock Keys/Buttons: Set using Menu 21 Lock .

Instructions: Print on a heavy card-stock paper. (Paper designed for printing photos will work well.) Cut out each (side-by-side) pair, then fold over so that Memory Storage appears on one side and Miscellaneous Operations appears on the other. Laminate and trim to the size of a credit card. It is now easily carried in your wallet or even in your ID badge holder.