

Quick Reference Card for Yaesu FT-8800R, courtesy W5JCK

Yaesu FT-8800R: Memory Storage	Yaesu FT-8800R: Miscellaneous Operations
Press V/M for VFO mode , tune the receive frequency.	TX Power: Press LOW to change level.
Press SET to enter Set mode .	Rev TX/RX: Press right REV(V/M) (if Menu 20 is set to KEY2).
Set tone mode via Menu 41 TONE M . Set tone frequency via Menu 40 TONE F .	PRI channel: Store the frequency for the Priority Channel into Memory Channel 1.
Press and hold DIAL for ½ second to exit Set mode .	Dual Watch: Press and hold HM for ½ second.
Press and hold SET for ½ second, turn to desired memory channel, press SET again to store frequency.	Lock Keys/Buttons: Set using Menu 21 Lock .

Instructions: Print on a heavy card-stock paper. (Paper designed for printing photos will work well.) Cut out each (side-by-side) pair, then fold over so that Memory Storage appears on one side and Miscellaneous Operations appears on the other. Laminate and trim to the size of a credit card. It is now easily carried in your wallet or even in your ID badge holder.