

PROGRAMING Yaesu FT-1500

To set the tone Frequency:

- Hold MHz 1 second
- Rotate knob until TONE shows
- Momentarily press MHz
- Rotate knob to Squelch Type (T)
- Hold MHz 1 second to SAVE
- Rotate knob to TN FREQ
- Momentarily press MHz
- Select tone frequency
- Press MHz 1 second to save

To Program a frequency:

- Push D/MR to VFO mode
- Enter Frequency desired with keypad
- Offset frequency is automatically set
- Program tone frequency if necessary as above
- Hold D/MR 1 second
- Select channel number you wish to store the frequency with the dial
- Momentarily press D/MR to store