

YAESU FT-1802
REPEATER MEMORY

In VFO mode select freq
Press and hold "set" for 1 sec
Rotate dial to "SQL TYP" (49)
Press "SET" then rotate dial to
"TONE" (51)
Press "SET" and rotate dial to
"TONE FREQ" (52)
Press "SET" and rotate dial to
to selected tone freq
Press "SET" for 1 second
Within 5 seconds, rotate dial
To desired memory number
Press "M/W" to store.

Ron Green KG6RLG

YAESU FT-1802
SIMPLEX MEMORY

In VFO mode select freq
Press and hold "M/W" key for 1 sec
Within 5 seconds, rotate dial
to desired memory number

POWER CHANGE

Press "Low" (A/N) key or
Press "C" key on mic bargraph
under freq display indicates
power setting.

DELETE FREQS

Select freq, press and hold "D/MR
key 1 sec, press "A/N (Low)"
Press PTT