

### **Yaesu FT2800M Programming Steps**

1. Press Dw/MR key until radio is in VFO mode
2. Enter 6 digit frequency using Mic keys
3. Press Set key then turn knob to check Memory (21) and (28)
4. Turn knob to (27)
5. Press Set key PL frequency displayed
6. Turn knob to desired PL Frequency
7. Press set key for 1 second to exit set mode
8. Press and hold DW/MR key for 1 second, memory blinks
9. Within 5 seconds press DW/MR key quickly storing data and returns radio to VFO mode.
10. Press DW/MR key until MR mode entered and turn knob to memory location to check the memory position just programmed to verify data was entered.