

YAESU VX-150

Repeater Memory
vfo and select freq
press 'F', press '1'
rotate dial to 'T ENC'
press 'PTT'
press 'F', press '2'
rotate dial to sub freq
press 'F', press 'F' 1 second
rotate dial to memory #
press 'F'. press 'PTT'

Keyboard lock
press 'F', press '6'
repeat to unlock

YAESU VX-150

Simplex Memory
vfo and select freq
press 'F' 1 second
rotate dial to memory #
press 'F', press 'PTT'

Power Level
press 'F' then '3'
rotate dial to select level
press 'PTT'

Battery Voltage Level
press 'F', press '0'
rotate dial to #37
press 'F'
return - press 'F', press 'PTT'

RON GREEN KG6RLG