

Quick Reference Card for Yaesu VX-7R, courtesy W5JCK

Yaesu VX-7R: Memory Storage	Yaesu VX-7R: Miscellaneous Operations
Press V/M for VFO mode , tune the receive frequency.	TX Power: Press MON/F then TX PO LK to change.
Press MON/F then SET to enter Set mode .	Rev TX/RX: Press HM/RV (if Menu HOME/REV is set to REV) or press MON/F then HM/RV (if set to HOME)
Press MON/F then TONE to display the Tone menus. Set menu #1 SQL TYPE and #2 TONE SET .	PRI channel: Press and hold MON/F for ½ second, turn to desired memory channel, press BAND .
Press BAND then PTT to save and exit Set mode .	Dual Watch: Press MON/F then DW to activate.
Press and hold MON/F for ½ second, turn to desired memory channel, press MON/F again to store frequency.	Lock Keypad: Press and hold LK for two seconds.

Instructions: Print on a heavy card-stock paper. (Paper designed for printing photos will work well.) Cut out each (side-by-side) pair, then fold over so that Memory Storage appears on one side and Miscellaneous Operations appears on the other. Laminate and trim to the size of a credit card. It is now easily carried in your wallet or even in your ID badge holder.