

Yaesu FTM-10E Quick Reference

Item No.	Menu Item	Function	Values
1	AF AUTO	Automatic Volume Control	Off /On Min/ On Mid/On Max
2	AF DUAL	AF Dual operation, listen to AM/FM/Line In Radio & Ham band	Off /AM Auto/AM Hold/ FM Auto /FM Hold/LI Auto/LI Hold
3	AF PITCH	Tone control	LOW-3/2/1/ Normal /High 1/High2
5	AF VFO	Changes DIAL knob action	Toggle / Autoback
9	CLOCK	Internal Clock / Stop Watch	Off /On
10	CLUB PRI	Club channel Priority	Off /Auto/Hold
12	DIMMER	Display Dimmer	Dimmer 1-5
15	FKEY SEL	Assigns a function to the F key	AF Dual/Arts/Dimmer/Horn1-4/Intercom/Moni/ PA /Reverse/Scan/Sql Lev/SSch/Tcall/TX Power/Vol Itcom
19	MIC GAIN	Adjusts Microphone Gain	Min-Max
22	PTT LOCK	Enable locking of PTT when Lock is activated	Off /On
23	PTT MODE	Changes how the PTT button works	Moment /Toggle
24	RPT ARS	Automatic Repeater Shift	On /Off
27	RX EXP	Band Expansion	Normal /Expand
31	SCN MODE	Scan Resume Mode on:	Busy /Hold Time 3s/Time 5s/Time 10s
34	SPEAKER	Select Speaker	Rear /F+R/ Front /Off
38	SQL LEVEL	Squelch Threshold	Sql Off/Sql Min/Sql 01-06/Sql Max
39	SQL TSQLF	CTCSS Tone Frequency	
40	SQL TYPE	Squelch Mode	Off / Tone Enc /Tone Sql/Rev Tone/DCS
44	TX POWER	Transmit Power Level	Low/Mid/ High

Bold = Default, **Green** = Preference

Repeaters	CTCSS	Press & Hold VOL/SEL , rotate Dial to <i>F40 SQL TYPE</i> , Press ▶ Key, Rotate Dial to <i>TONE</i> , Press ▶ to exit		
		Press & Hold VOL/SEL , Rotate Dial to <i>F39 SQL TSQLF</i> , Press ▶ Key, Rotate Dial to desired frequency, Press ▶ to exit		
	CTCSS Tones	GB3IN - 71.9	GB3CF - 77	GB3NF - 77
Bands	Band Expansion	Press & Hold VOL/SEL , rotate Dial to <i>F27 RX EXP</i> , Press ▶ Key, Rotate Dial to <i>EXPAND</i> , Press ▶ to exit		
	Operating Mode	Press & Hold VOL/SEL , rotate Dial to <i>F29 RX M MOD</i> , Press ▶ Key, Rotate Dial to <i>AUTO/WIDE FM/FM/NARR FM/AM</i> , Press ▶ to exit		
Memory	Store	Select band with ▲▼ keys, rotate Dial to select frequency, Press & hold ▶ key 'MIN' is displayed, then press ▶ key to store current settings		
	Recall Any Memory	Press any front panel keys ▲▼ until <i>GRP</i> appears, rotate Dial to select memory, press either ▲▼ key to select		
	Recall in Band Memory	Press the ▶ key, <i>MEMORY</i> appears, rotate Dial to select memory, press ▶ to return to VFO mode		
Memory Configuration	Group Memory	All memories stored are automatically allocated to the Group memory as well as the operating band memory. To delete a memory from the group memory, Press & Hold the ▶ key, rotate Dial till <i>M1 GROUP</i> appears, press the ▶ key to select, rotate Dial to OFF (delete), press VOL/SEL to store changes To add a previously deleted memory to the Group Memory, select the memory channel you wish to add, Press and hold ▶ key, rotate Dial until <i>M1 GROUP</i> appears, press the ▶ to select, rotate Dial to ON (add), press VOL/SEL to store changes		
	Memory number change	Recall the memory which you wish to change the memory channel, Press & hold the ▶ key, rotate Dial until <i>M2 MEM CH</i> appears, press the ▶ key to select, press & hold the ▶ key, rotate Dial to desired memory channel number, press & hold the ▶ to select, press VOL/SEL to store changes		
	Memory channel sort	Press the ▶ key to select memory recall mode, Press & hold the ▶ key, rotate Dial until <i>M3 MEM SORT</i> appears, press the ▶ key to select, <i>SORT Y</i> appears, press & hold the ▶ key to sort the memory channels		